







## ICI STEP INSTALLATION

### STEP 7 (Bolt Bar to Rear Bracket and Hoop Step)

Repeat steps 5 and 6 for the rear bracket and hoop step. As shown in Figure 7, the rear bracket and hoop step share a bolt in the very rear. See the diagram on page 3 for reference.

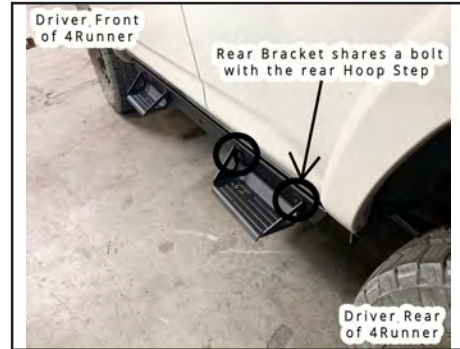


Figure 7.

### STEP 8 (Tighten Brackets to Truck)

Make sure all 3 brackets, the bar, and the 2 hoops steps are loosely fitted to each other and to the vehicle. Using a 12 or 13mm socket, fully tighten the front bracket to the vehicle, make sure the bracket is flush with the mounting surface. Repeat on the middle and rear bracket checking the bracket alignment as needed.

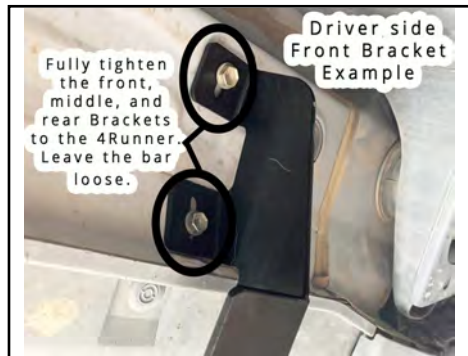


Figure 8.

### STEP 9 (Tighten Brackets to the Bar and Hoop-Steps)

Now, adjust the bar from front to back and tighten the bar to the brackets with a 13mm socket and provided Allen. Make sure the bar is flush with the front and bottom face of the brackets as you are tightening them.



Figure 9.

## ICI STEP INSTALLATION

### STEP 10 (Finish)

Check all hardware and make sure they are fully tightened. Reference diagram on page 3 for hardware locations. Repeat Steps 1-8 for the Passenger Side.



Figure 10.

## TAG ICI ON SOCIAL MEDIA

[www.facebook.com/InnovativeCreationsInd](https://www.facebook.com/InnovativeCreationsInd)



[www.instagram.com/ici\\_usa](https://www.instagram.com/ici_usa)



Hashtags:

#ICIUSA  
#ICAlumilite  
#AlumiliteSteps  
#AlumiliteBumpers